

Spectrum Xumo Stream Box -- Quick Reference

Remote Button Layout

- Power (🔴): Turns your TV+ and Xumo box on/off.
- Voice Control (🎤): Press and hold to speak commands (e.g., "Open Spectrum TV", "Find action movies").
- Input (📺): Switches TV input/HDMI source.
- Directional Pad (Nav Ring):
 - Up / Down / Left / Right: Navigate menus.
 - Center (OK / Select): Select an item or pull up player controls.
- Back (⬅️): Returns to the previous screen or menu.
- Home (🏠): Opens the Xumo Home Screen.
- Number Pad (0-9): Jump directly to channel numbers in the Spectrum TV app.
- Volume (+/-) & Mute: Adjusts or mutes audio.
- Channel (+/-): Changes channels in live TV apps.

Navigating the Xumo Interface

- Go to Main Menu → Press the Home (🏠) button on your remote.
- Launch Spectrum TV → Select the Spectrum TV app from the home screen, or press the Voice button and say "Spectrum TV".
- Return to Previous Screen → Press the Back (⬅️) button.
- Access Search → Scroll to the top search bar on the home screen OR hold the Voice (🎤) button.
- Adjust Settings → Go to Home (🏠) > Settings (⚙️) to manage Wi-Fi, audio/video, and connected devices.

Using the Spectrum TV App

- **Open Channel Guide:** Press Left on the D-Pad or press the Guide / OK button while watching live TV.
- **Change Channels:** Use Channel Up/Down, type numbers using the Number Pad, or select from the Guide.
- **Recent Channels / Quick Bar:** Press Down on the D-Pad while watching live TV to view recent channels and quick controls.
- **Filter Channels:** Inside the Guide, press Left again to filter by Favorites, News, Sports, or Movies.
- ◦ Highlight a channel in the Guide and press/hold OK to mark it as a Favorite.

Essential Voice Commands (Hold)

- **Find Shows & Movies:** "Search for Stranger Things", "Show me Tom Hanks movies"
 - **Launch Apps:** "Open Netflix", "Open YouTube", "Launch Spectrum TV"
 - **Change Live Channels:** "Tune to ESPN", "Go to Channel 12", "Switch to CNN"
 - **Playback Controls:** "Pause", "Play", "Rewind 30 seconds", "Fast forward 2 minutes"
-

Quick Troubleshooting & Tips

Remote Not Responding / Pairing Remote

1. Hold the Digit 1 and Digit 3 buttons simultaneously for 3 seconds until the light blinks.
2. Follow the on-screen prompts to pair with your Xumo box and TV.

Restarting the Xumo Box

- Soft Reset: Go to Settings () > System > Restart.
- Hard Reset: Unplug the power cable from the back of the box, wait 10 seconds, and plug it back in.

App or Video Freezing

1. Press Home () to exit the app.
2. Relaunch the app. If the issue persists, restart the Xumo box.

Quick Tips

- Universal Search: Searching from the Xumo main menu searches across all installed apps (Spectrum, Netflix, Prime Video, Disney+, etc.).
- Keep Box Powered On: The Xumo box enters a low-power sleep mode when not in use. Press any button on the remote to wake it up instantly.